

Catalytic combustor replacement for Models 200 Classic and 201 Fireview

Please read all the instructions before you begin the procedure. Confirm that you have all the necessary tools and parts required. Allow about twenty minutes to complete the replacement. If you have any questions, technical support is available toll free at 1-800-866-4344, Monday- Saturday 9:00-5:00 ET.

Tools Needed:


- 1/2 “ wrench and socket
- Putty knife
- Vacuum
- WD-40 or similar penetrating liquid
- Large flat blade screwdriver
- 7/16” socket or wrench

Materials Needed:



- K-532 SS replacement catalytic combustor
1. Make sure the stove is cool.
 2. Open the top lid to access the catalytic combustor. You may remove the lid completely to eliminate the risk of it falling. Facing the stove, the combustor is located on the left under a cast iron hood.



3. Use a 7/16" socket or wrench to remove the deflector from the hood.

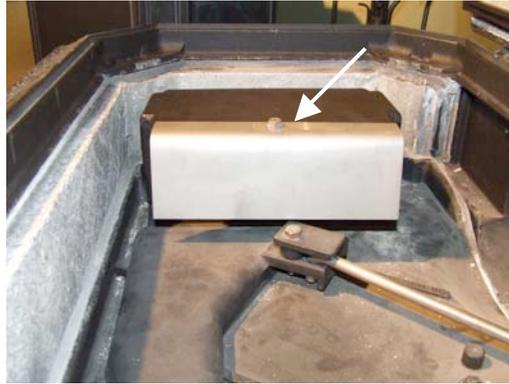

4. The hood is held in place with two bolts and nuts. To remove the bolts use a 1/2" socket from inside the firebox and wedge a flat blade screwdriver between the hood and the bolt head inside the top of the stove. It may be helpful to spray penetrating liquid on the nuts inside the firebox. (The nuts do not need to be replaced after the new combustor is installed, simply drop the bolts back through the hood for proper alignment).

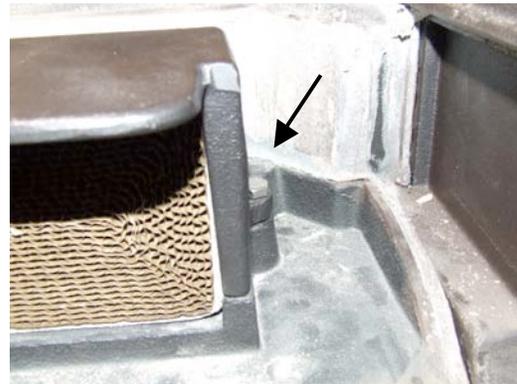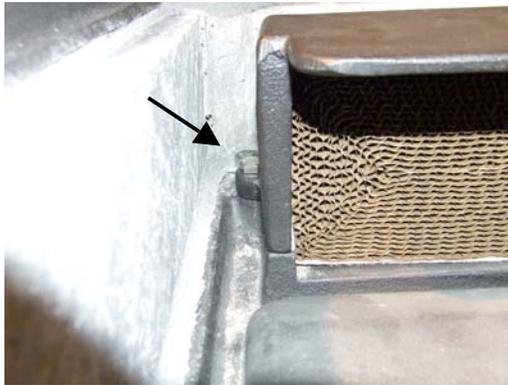

5. Gently lift the hood from the top of the stove. Turn it upside down to remove the old combustor. Use a putty knife and vacuum to remove any residual gasket material from the hood as well as the area where the combustor rests on the baffle plate.



6. The replacement combustor is pre-wrapped in a white gasket material. Place the new combustor on the baffle plate to the right of the rectangular opening to the firebox.



7. Place the cast iron hood over the combustor. The combustor may seem a little loose at first, but the white gasket material will expand upon heating. Use the bolts for proper alignment. It is not necessary to re-install the nuts on the bolts.
8. Return the deflector to the hood.
9. Replace the top lid on the stove. Be sure it is seated properly on the gasket.
10. Enjoy your stove!

We need your help! Woodstock Soapstone Co. takes great pride in providing the highest quality products as well as the best customer service in our industry. We welcome your suggestions and input to help us achieve these goals. If you have any comments to improve our products, service, and information provided in these instructions please contact us at (800) 866-4344 or info@woodstove.com. Thank you.

Revised 5/11/2011