

## **Top Stone(s) Replacement (Models 205/201/200)**

Please read all the instructions before you begin the procedure. Confirm that you have all of the necessary tools and materials. If you have any questions technical support is available toll free at 1-800-866-4344, Monday -Saturday 9:00 – 5:00, ET.

---

### **Tools Needed:**

- Large flat blade screwdriver
- Phillips screwdriver
- Scissors
- Putty knife

### **Materials Needed:**

- 12' 3/16" gasket
- Gasket glue
- (6) 1/4"-20 x7/8" round head screws
- (6) 1/4" external tooth washers
- (2) 10-32 phillips head screws (Model 205)

1. Make sure the stove is cool.
2. Remove the top lid from the stove. This lid is not fastened and will lift straight up and off.



3. Place the top lid upside down on a workbench with a piece of cardboard underneath it to protect the bench and the lid. It is helpful to elevate the front edge of the lid with a block of wood.

4. Use a Philips screwdriver to remove the metal heat shield from the two stone retainers. (The Model 201 Fireview and Model 200 Classic do not have the heat shield on the lid.)



5. Use a large flat blade screwdriver to remove the six screws from the two cast stone retainers.



6. Remove the stone(s) to be replaced. Push the stone(s) up and out of the frame from below.



7. Remove the gasket that rests under the stone(s). Use a putty knife or flat blade screwdriver to clean the residue from the frame as much as possible.




8. Dry fit a length of gasket in the frame. Trim to fit. Apply a small bead of gasket glue to the frame and install the pre cut length of gasket. Do not allow the glue to dry before the gasket is in place or it will become hard and lumpy.



9. Place the new stone into position. Be sure the stone is resting evenly on the gasket and not the cast iron frame. This will ensure an even seal around the perimeter of the stone.



10. If the stone rests on the cast iron not the gasket, use a sander or flat file to remove stock from the edge of the two areas indicated in the following photo. Only remove enough to ensure a good fit (Maximum of 1/16")

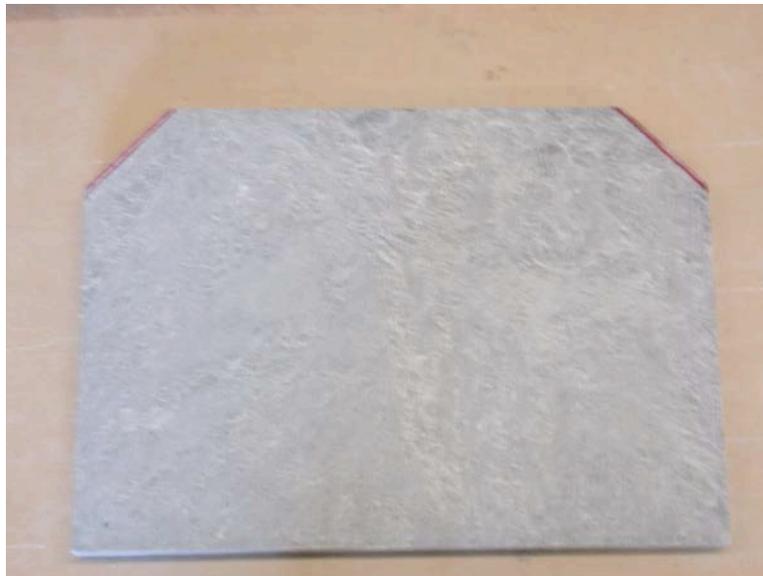


Mark a line across the edge at 1/16" using a pencil or fine pointed object and do not go farther than that mark. See the following photo as a guide. (Note: We colored the area only so the line would be visible in the photo.)



11. Pre cut (6) 1" lengths of gasket. Place the stone retainer back on the stone. Push a 1" piece of gasket between the stone and retainer at each screw location and then start all the screws and star washers.



12. Tighten the screws evenly. Give each screw a few turns and repeat around the frame. Tighten the screws snugly, but do not over-tighten as this may lead to broken stone. With the screws completely tight you should be able to squeeze the retainer toward the lid and have no visible motion.

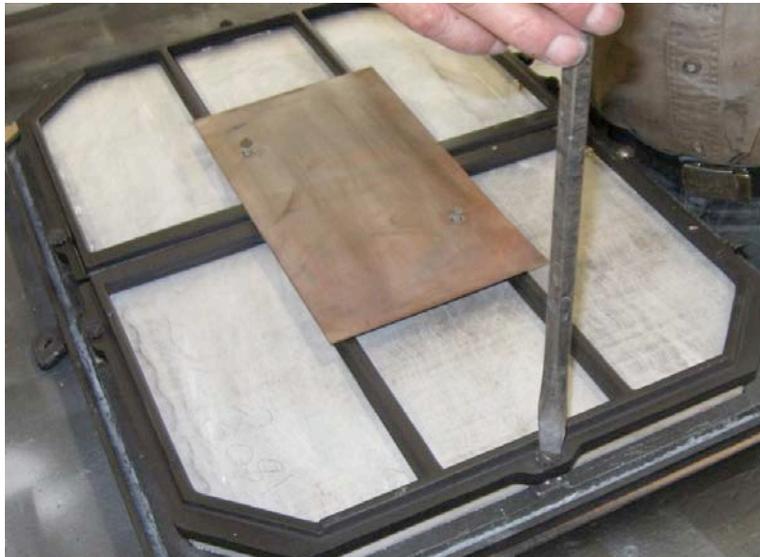

13. Replace the heat shield on the stone retainers if you have one.



14. Carefully replace the top lid.



15. Enjoy your stove!

5/3/10

**We need your help!** Woodstock Soapstone Co. takes pride in providing the highest quality products as well as the best customer service in our industry. We welcome your suggestions and input to help us achieve these goals. If you have any comments to improve our products, service, and information provided in these instructions please contact us at (800) 866-4344 or [info@woodstove.com](mailto:info@woodstove.com). Thank you!

