

Replacing the ON/OFF Switch

Please read all the instructions before beginning the procedure. Confirm that you have all the necessary tools and materials. If you have any questions technical support is available toll free at 1-800-866-4344, Monday- Saturday 9:00- 5:00 E.T.

Tools Needed:

- 5/32” allen wrench
- 5/16” nut driver
- Small flat blade screwdriver


Materials Needed:

- On/Off rocker switch, part #G-71-1

1. Remove the two screws that fasten the right side of the control panel cover to the back of the stove using a 5/16” nut driver or socket.
2. Use a 5/32” hex key (Allen wrench) to remove the three hex head cap screws that are on the left side of the control panel cover.



3. Carefully pull the cover up over the control knobs and off from the stove. Remove the wire to the piezo igniter. You may leave the wires from the on/off switch connected to the control valve, but disconnect them from the rocker switch.
4. Place the control panel cover upside down on a flat surface.
5. Remove the ON/OFF switch from the inside of the control panel cover. Use a small flat blade screwdriver to compress the tabs on the switch as you push it through the cover.
1. Press the new switch into the control panel cover. Make sure it is right side up.

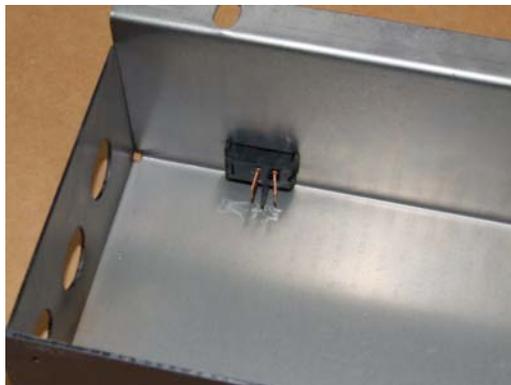

2. Attach the wires to the new switch. The circuit is not polarized so it makes no difference which connector is on top or bottom.



3. Carefully lower the control panel cover over the two knobs.
4. Attach the piezo wire to the piezo. It is too short to connect it before the cover is placed over the knobs.

5. Test the new switch. Light the pilot and turn the control knob to the “on” position. Place the rocker switch in the “on” position. The main burner should light.
6. Insert and tighten the two screws that attach the right side of the control panel cover to the back panel of the stove.
7. Insert and tighten the three screws that attach the left side of the control panel cover, the heat shield, and the back panel to the cast.
8. Enjoy your stove!!

We need your help! Woodstock Soapstone Co. takes pride in providing the highest quality products as well as the best customer service in our industry. We welcome your suggestions and input to help us achieve these goals. If you have any comments to improve our products, service, and information provided in these instructions please contact us at (800) 866-4344 or info@woodstove.com. Thank you.

Revised 7/8/11